

Unpack


(1) Soothing Projector (1) Power adapter

Plug In

The Project Nursery Soothing Projector offers 2 options for power:

- power adapter
- 3 AAA batteries (not included)

To use the power adapter: Plug the power adapter into the **DC IN 6V** jack on the back of the Soothing Projector. Plug the other end of the power adapter into a working outlet or surge protector.

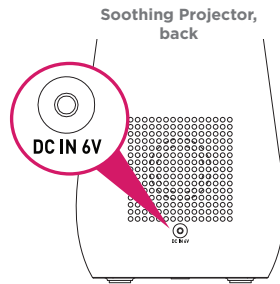


To use batteries: Use a flathead screwdriver (not included) to unlatch the battery door on the bottom of the Soothing Projector.

Remove the battery door and insert 3 AAA batteries (not included) into the battery compartment. (Match the polarity signs on the inside of the compartment!)

Place the battery door back on the bottom of the Soothing Projector. Screw the battery door latch back into place to lock the door.

IMPORTANT: NEVER place the Soothing Projector or cords of any kind inside the crib. NEVER place the Soothing Projector or cords within reach of children. THIS IS NOT A TOY.

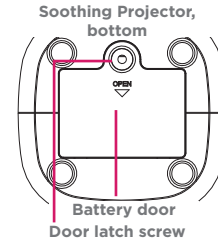

Everyday use

PLAYING SOUNDS


The Project Nursery Soothing Projector offers a variety of soothing lullabies and nature sounds, as well as white noise, to calm baby.

To cycle through these sounds: Press the **SOUNDS ON** button on the front of the projector. Each press goes to a different selection.

To adjust the volume: Press the - or + button.

To turn off sounds: Press the **X (SOUNDS OFF)** button on the front of the projector.


Note: If you hear a vibrating noise when you're playing sounds, it might be the battery compartment door on the bottom of the projector. Check to make sure the battery door is completely closed and its latch is securely screwed in.

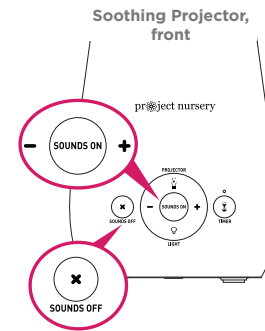

USING THE PROJECTOR

To turn the projector on: Press the **PROJECTOR** button on the front of the projector.

To adjust brightness of the projector (or turn it off): Press the **PROJECTOR** button repeatedly to cycle through the settings (low, high, and off).

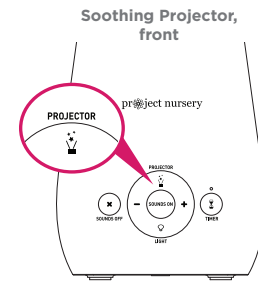

CHANGING THE PROJECTOR IMAGES

The Project Nursery Soothing Projector offers three sets of images: colors/shapes (for newborns), sealife, and transportation.

To change to a different image set:

Make sure the projector is off. Gently twist the door on the top of the projector to unlatch it. Then lift the door off.

On the bottom of the projector door, there's a white image wheel with the three sets of images. Grab the outside edges of the wheel and gently rotate them to the left or right until you feel a click. **(If you can't go in one direction, try the other direction).** Each click is a different image set.

Hold the projector door up to a light to see which set you're on. When you've found the one you want, place the projector door back on top of the projector and twist it back into place.

Soothing Projector, top


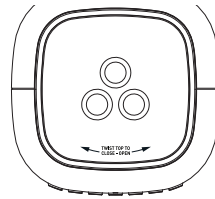


Image wheel
(on the underside of
the projector door)

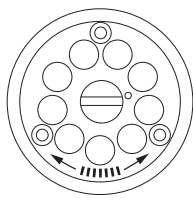


USING THE LIGHT

The front of the Soothing Projector offers soft area illumination in three levels of brightness, to complement the projector lighting.

To turn the light on: Press the **(LIGHT)** button on the front of the projector.

To adjust or turn off the light: Press the **LIGHT** button repeatedly to cycle through the settings (high, medium, low, and off).

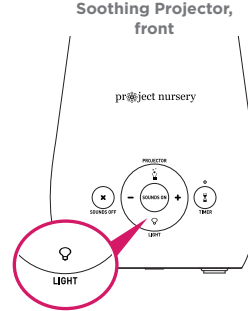


USING THE TIMER

The timer shuts the projector, light, and sound off automatically after 1 hour.

To set the timer: Press the **(TIMER)** button on the front of the projector.

The indicator above **TIMER** button shows that the timer is active.

Press **(TIMER)** again to turn the timer off.

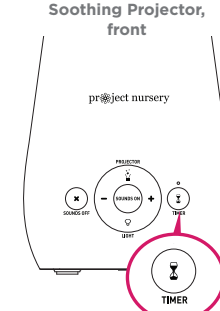

Questions?

Just call 1-844-393-7338 or visit ProjectNursery.com

©2018 Voxx Accessories Corp.
3502 Woodview Trace, Suite 220
Indianapolis, IN 46268

PNP75 QSG 01

project nursery®

SOOTHING PROJECTOR NIGHTLIGHT + TIMER

Quick Start Guide